




## **Smart Bidet Seat Toilet Suite**



Tel : 03 9998 0999      Email: [sales@hellokitchen.com.au](mailto:sales@hellokitchen.com.au)

**[www.hellokitchen.com.au](http://www.hellokitchen.com.au)**

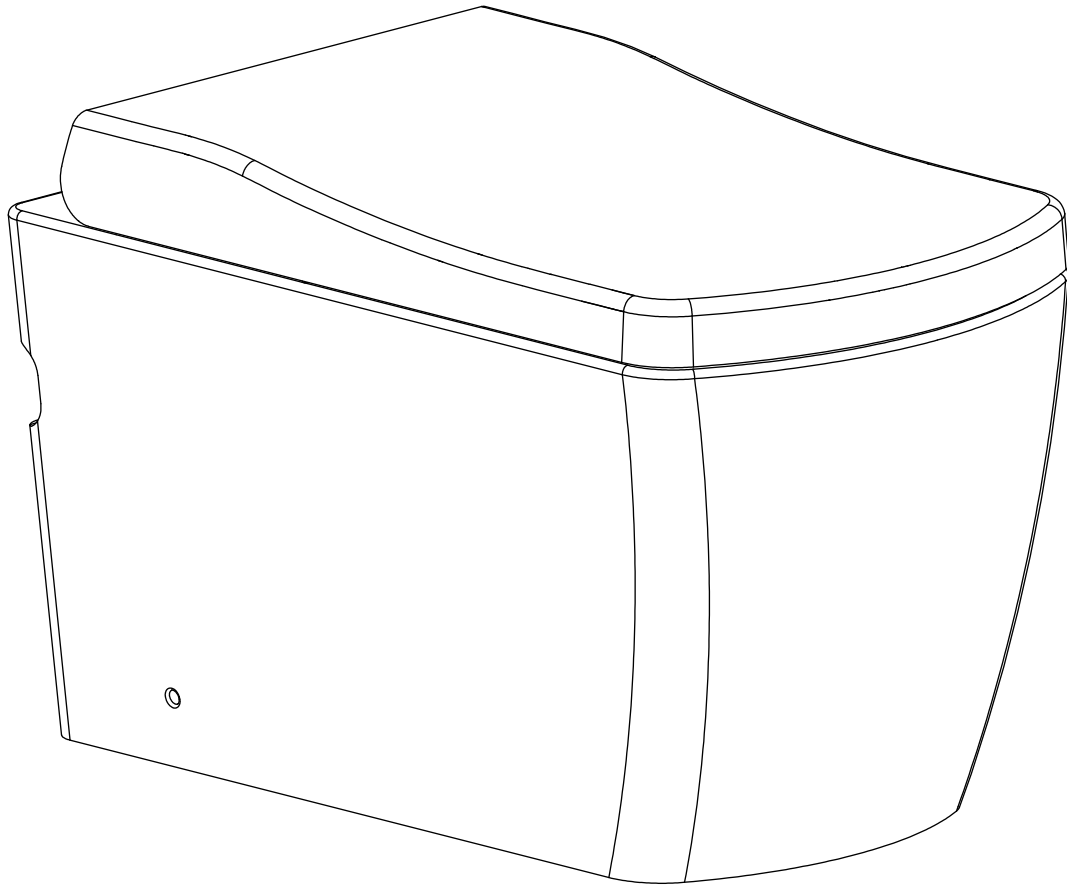

# **Smart Toilet Suite - S300T**

## **Toilet Installation Instruction**

Thank you for choosing our products! Please read this manual carefully before installation

# Directory





## OPERATING INSTRUCTIONS










Safety Precautions .....	01
Packing list .....	03
Size and Installation Requirements.....	04
Name of parts and Channel setting .....	06
Installation Instruction .....	07
Function Description .....	15
Confirm Before Using .....	17
Maintenance Instruction .....	17
Troubleshooting .....	18
Check and Accept .....	19
Specification .....	19
Product Model .....	20

# Safety Precaution — Warning —


Please read the manual carefully before using the product properly. Please keep the instruction manual after reading.  
When a person who has a physical or mental disability or a lack of experience and common sense, including children, must be used under the guidance of a normal person. Children can not play with the machine. The following notices are very important to comply with.

## ● Signs explanation










	Warning	Do not fail to comply with the regulations. Risk of the personal injury or death.
	Caution	Do not fail to comply with the regulations. Risk of the personal injury or property damage.
	Prohibition	Danger tips, please strictly comply with, otherwise cause casualties.
	Compulsion	Must comply with the tips.

 Warning		
	Prohibition disassemblage	Absolute prohibition of removal, repair, alteration of this product. ● Risk of fire, electric shock or other accidents.
	Prohibition watering	Do not pour water or detergent to the product or on the power plug. ● Risk of fire, electric shock or other accident.
	Compulsion	Do not use the product if fault. Please contact service provider to repair. ● If there are faults as follow, please switch off power and close valve. 1. leak from pipe or interior 2.temperature abnormally high. 3.unusual noise and smell. 4.fuming.
		● Do not use the product if it doesn't work. if fail to comply with it, may cause fire, electric shock, and watering in the room. Please contact the service provider.
		Do not use other water except tap water. ● Risk of dermatitis and other issues.
	Prohibition	Do not use loose and unstable power outlet. ●Risk of fire,electric shock or other accidents.
		Please use the specific(220V~240V / 110, 10A,50Hz-60Hz)power outlet. Do not use other power except AC 220V~240V. When you use a power exceeding outlet provides, may cause heat even fire.
		Do not destroy power supply line and connecting line. 1.Do not damage,process,heat 2.Do not force bent, volume binding, pull 3.Do not place heavy objects on the power line or connecting line. If ignore the damage,andcontinue to make it work,may cause fire,electric shock,short circuit and other accidents.
	Compulsion	(1)Do not splashed on the product or put it in excessive moisture place. When bathing in the wash room, please keep fresh by ventilation fans or ventilation ports.(Risk of fire or electric shock) (2)This product must be grounded.(Risk of electric shock) (3)Make sure power plug connect only to a dedicated power outlet( 220V~240V,10A,50Hz-60Hz ).( Risk of fire or electric shock) (4)If the power line is damaged, please don't remove by yourself. It must be finished by manufacturer, or the professionals. (5)The new hose—sets supplied with appliance are to be used and that old hose—sets should not be reused.
		If sit on the seat of long time,please keep the seat under low temperature,so that not cause ambustion. Please keep the temperature in low for the following persons: ● Children,the olds who can't adjust the temperature to appropriate by themselves. ● Patient、 disabled who can't move freely. ● The sleepy persons because of taking hypnotics (such as sleeping pills,cold medicine),drink heavily,excessive fatigue
	Grounded	Please make sure if it is grounded. If fail to be grounded, may cause fault or electric shock.
	Safety Precaution	Do not approach to product with openfire. ●Risk of fire.
	Prohiition	Do not place heavy objects or stand on the cover of the toilet,also not impact product. If the product is broken,may cause personal injury or watering in the room.
		Do not put or block the wind outlet with fingers or other items. ● Risk of burn,electric shock or accessories damaged.
		Do not make hose bend,damaged. ● Risk of leakage. Cleaning with kitchen abluent (neutral).Do not use following items: Toilet detergent、 housing detergent、 propellant、 banana oil etc. Risk of plastic parts damaged,even personal injury if broken. ● Risk of leakage if hose damaged. Do not flush other stuff except shit 、 pee and toilet paper. ● Risk of toilet—colgging,sewage spills. Do not remove filter if the valve is open. ● Risk of spraying water.


# Safety Precaution — Warning

 Observation	Please fix the valve tightly. ● Risk of leakage.
	When leaking, please close the valve.
	Prevent injury due to freezing. ● Risk of leakage because freezing will cause hose or interior damage.


# Safety Precaution — Warning

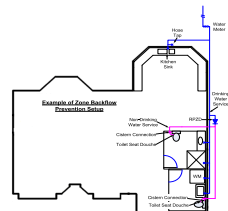 Warning	
 Observation	<ul style="list-style-type: none"> <li>● Tap water pressure must be between 0.15MPa-0.75MPa. (dynamic pressure 1.5 - static pressure 7.5kg)</li> </ul> <p>If the roughing-in is 300mm, the minimum flow rate is 20 L / min; If the roughing-in is 150mm or P-trap, the minimum flow rate is 30 L / min.</p> <p>After installation, make the power supply plug connect to power outlet, If the LED indicator lamp lights, the product is powered on.</p>
 Observation	<ul style="list-style-type: none"> <li>● Avoid exposing to the straight sunlight. May cause the product change color, and not work normally.</li> <li>● Do not make pee on the main parts or nozzle. May cause fault.</li> <li>● Do not lean on cover. May cause cover damage.</li> <li>● When electrical storm, please disconnect the power plug and power outlet. May cause fault.</li> <li>● When does not use for long time, please turn off the water and power.</li> <li>● In daily, please avoid splashing water to the product. May cause water into the interior, and damage.</li> </ul>
 Observation	<ul style="list-style-type: none"> <li>● Keep the remote control away from water. May cause the water enter to the interior, and damage. Please take care of it</li> <li>● After remote control used for long time, please replace the battery if the signal received weakly because of battery energy exhausts.</li> </ul>
 Observation	<ul style="list-style-type: none"> <li>● Avoid stuck of the track of the cover or seat when opening or closing it. May cause fault.</li> <li>● Do not seat on the cover when the cover is closed and open. May cause fault.</li> </ul>
 Observation	<ul style="list-style-type: none"> <li>● The cross-connection hazard rating is high hazard. This douche seat is supplied with a backflow protection device of atmospheric vacuum breaker. It does not apply to high hazard rating. Therefore, when installing the product, be sure to install a backflow preventer suitable for high risk levels in the upstream system of the product water supply.</li> </ul>
 Observation	<ul style="list-style-type: none"> <li>● Cross-connection means any actual or potential connection between a water supply and any contaminant.</li> <li>● Where the douche outlet is, in all positions, less than 25 mm above the overflow level of the pan, backflow prevention is required. Where the outlet, in any position, is less than 25 mm above the overflow of the pan, a high hazard backflow prevention device, complying with AS / NZS 2845.1 or AS / NZS 2845.2, shall be installed.</li> </ul>
 Observation	<ul style="list-style-type: none"> <li>● According to the definition of B5 in Chapter 3 of PCA, our products are high-risk products, so backflow prevention shall be installed externally. Based on the definition in Chapter 4 of AS/NZS 3500.1:2018, we recommend the Reduced pressure Zone Device (RPZD). The reference figure is as follows</li> </ul> <div data-bbox="1225 1854 1453 2063">  </div>


Packing List

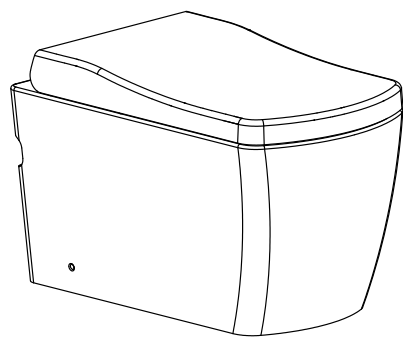


Toilet

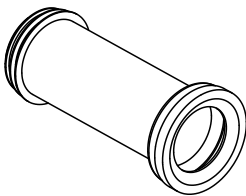


Sewage pipe (P-trap)

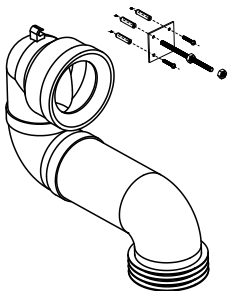


Sewage pipe (S-trap)

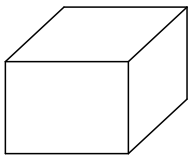

Accessory box

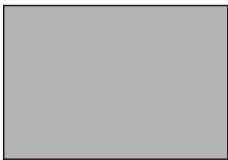


Instruction


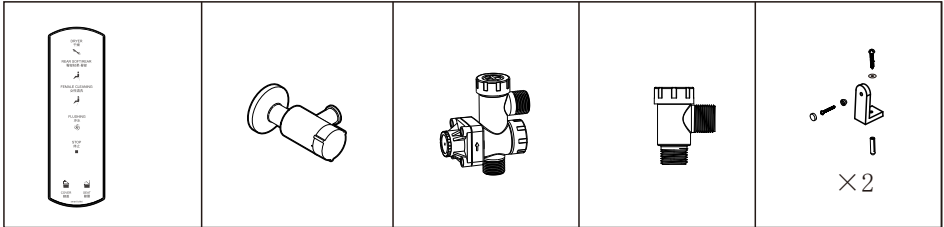


Our company reserves the right of final interpretation. We reserve the right to make changes in product characteristics, packaging or availability at any time without notice.

## Size and Installation Requirements

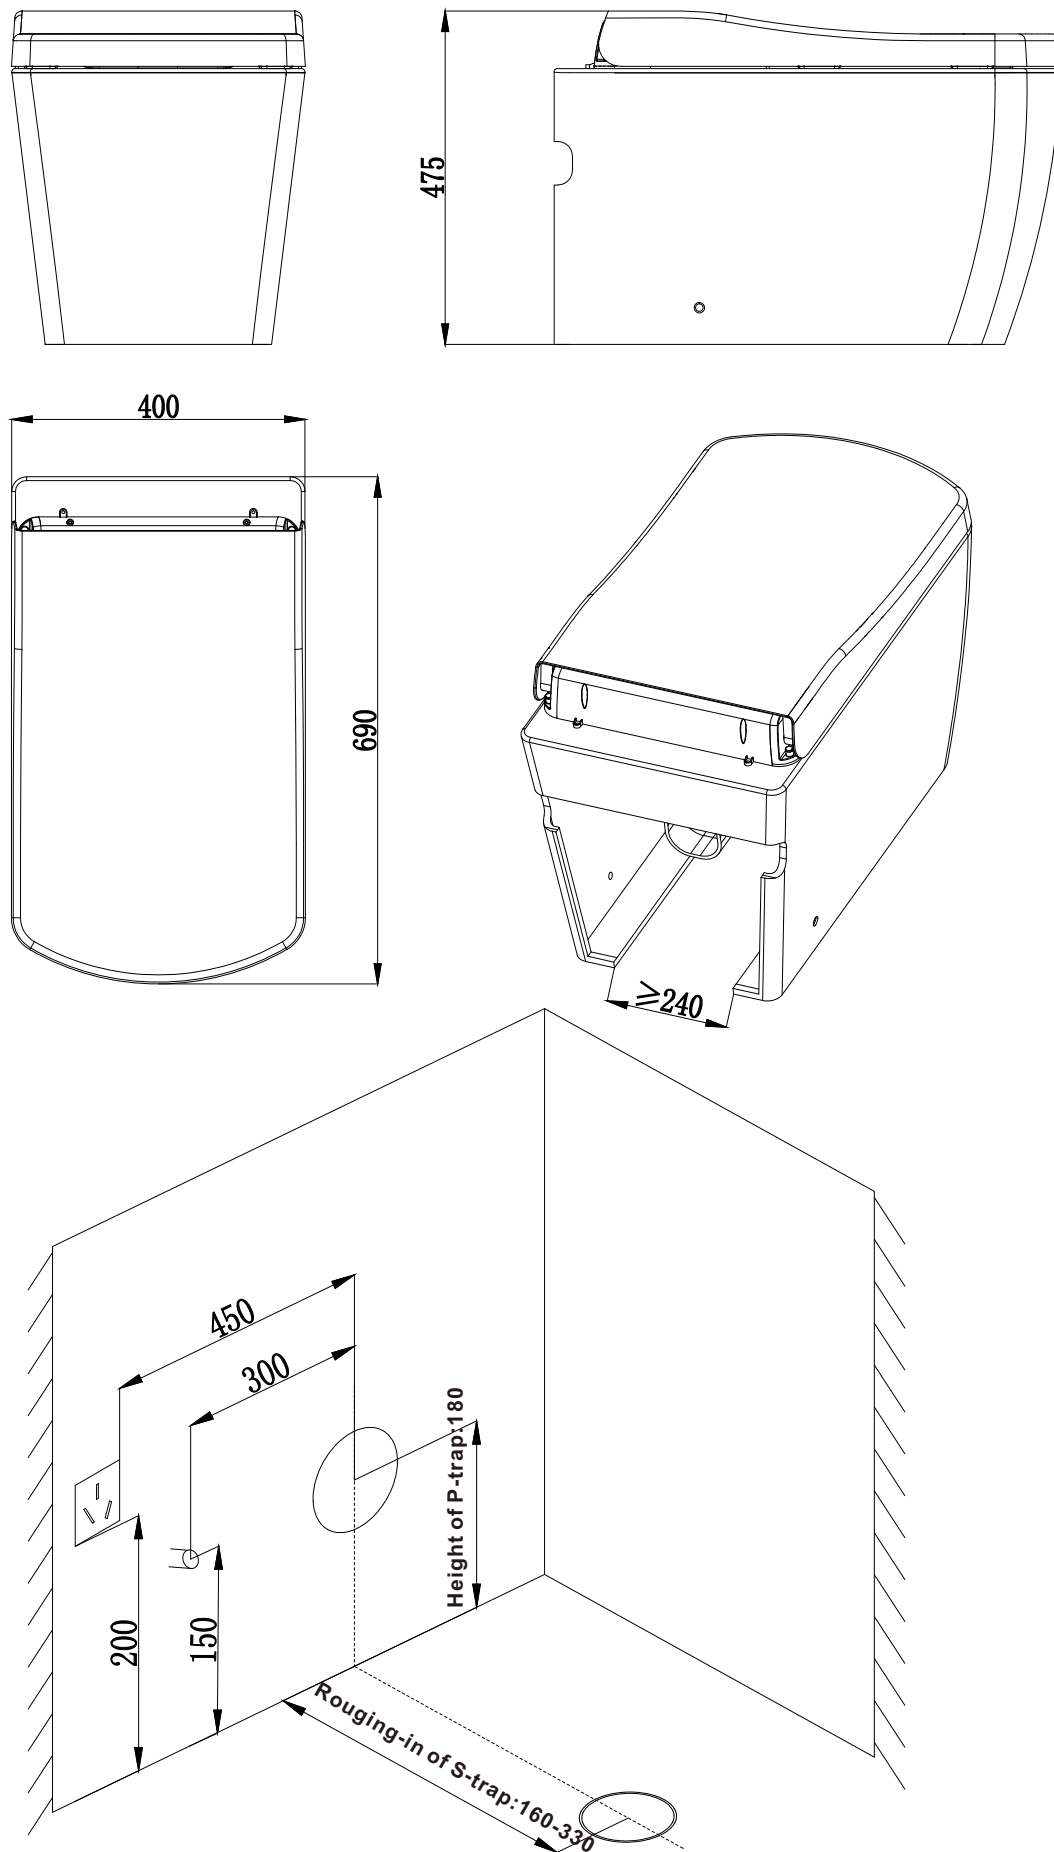


Size and Lnstallation Requirements

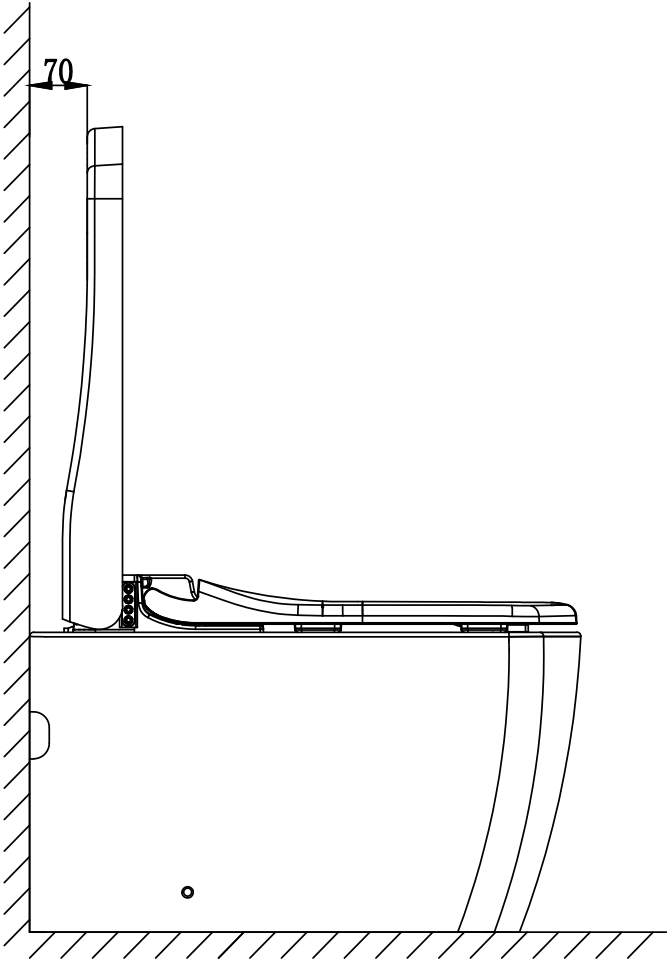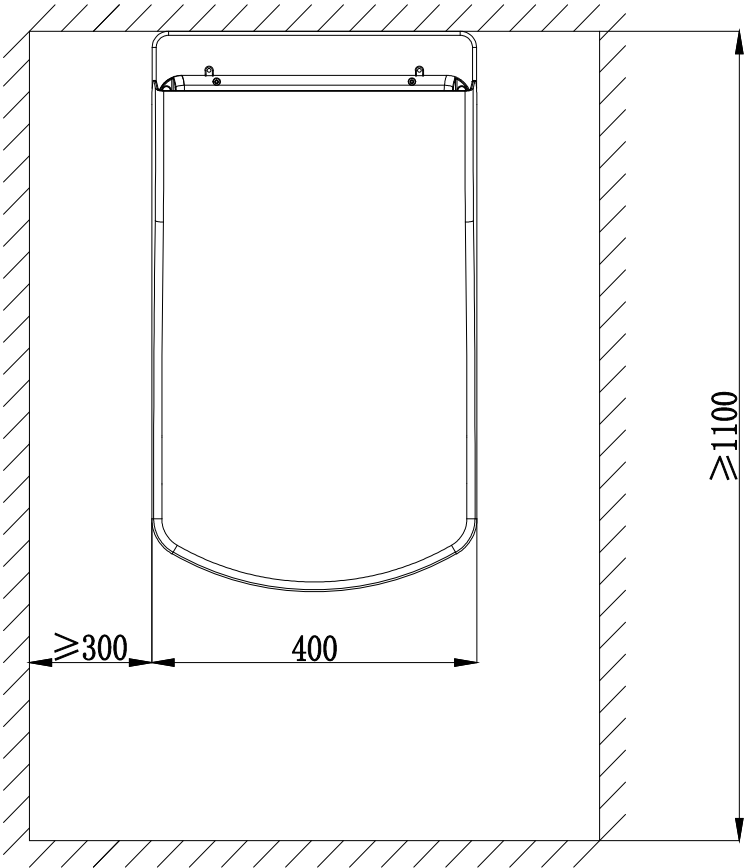



# Name of parts and Channel setting

## • One model for example

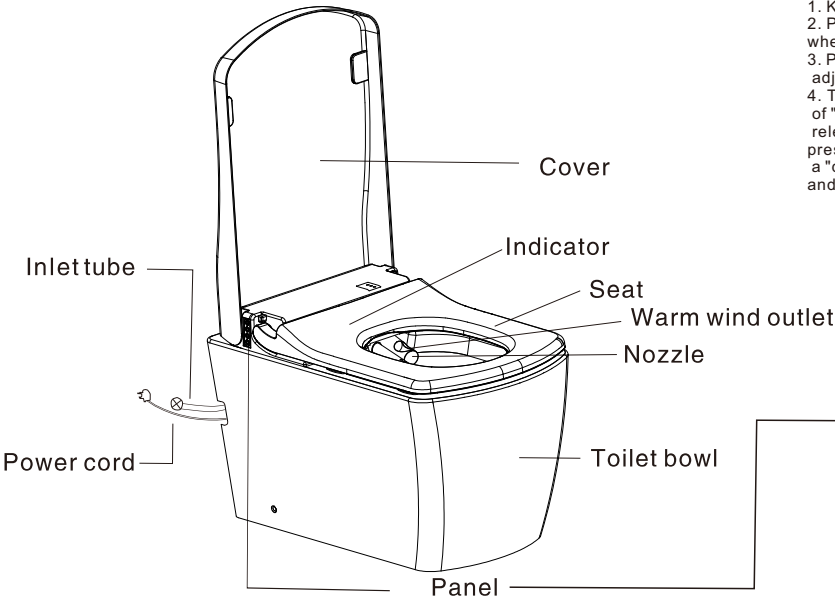





Tip. When you have multiple smart toilets, set them to different channels for remote control.

Setting channel steps:

1. Keep the toilet in the energized state, and operate the side buttons.
2. Press the stop button on the side button for about 2 seconds, and when you hear a "ding", press and hold the stop button.
3. Press and hold the stop button while pressing the rear soft button to adjust the coding channel.
4. There are 8 encoding channels in total, corresponding to the number of "ding" sounds, you can choose an encoding channel arbitrarily, and release the button after completion: 5. Take out the remote control and press the "+" "-" buttons at the same time until the buzzer After making a "ding" sound, release the button with your finger within one second, and the setting is now complete.

Operation Panel



Stop:press<stop>,Rear soft、Female cleaning、Air drying will stop.


Rear soft:press<Rear soft>,Rear soft will start. after 60s,Rear soft stop,then fiush and begin to dry.

Female cleaning:press<Female cleaning>, Female cleaning will start.after 60s,Female cleaning stop,then fiush and begin to dry.

Flush:press <Flush>,start to flush

Notice:Appearance and function in kind prevail

# Installation tool

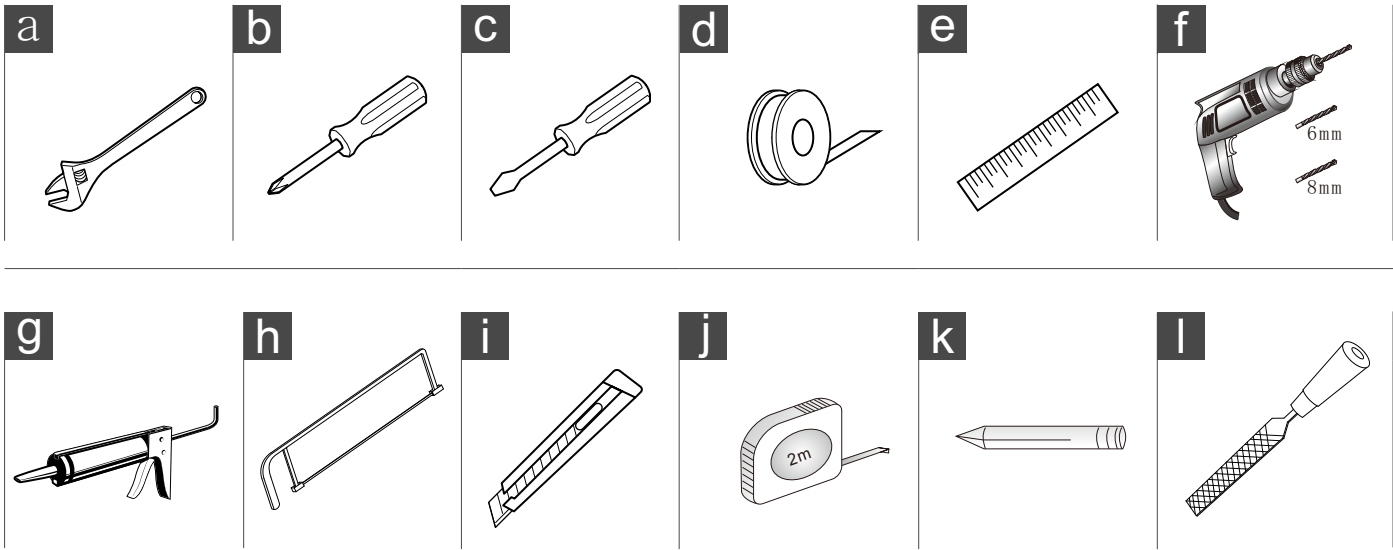


# Installation Instruction

## Installation Method

method 1: P-trap (confirm the height of P-trap is 180mm)




method 2: S-trap (confirm roughing-in 160mm-330mm)

Confirm the dimensions as shown in the figure before installation

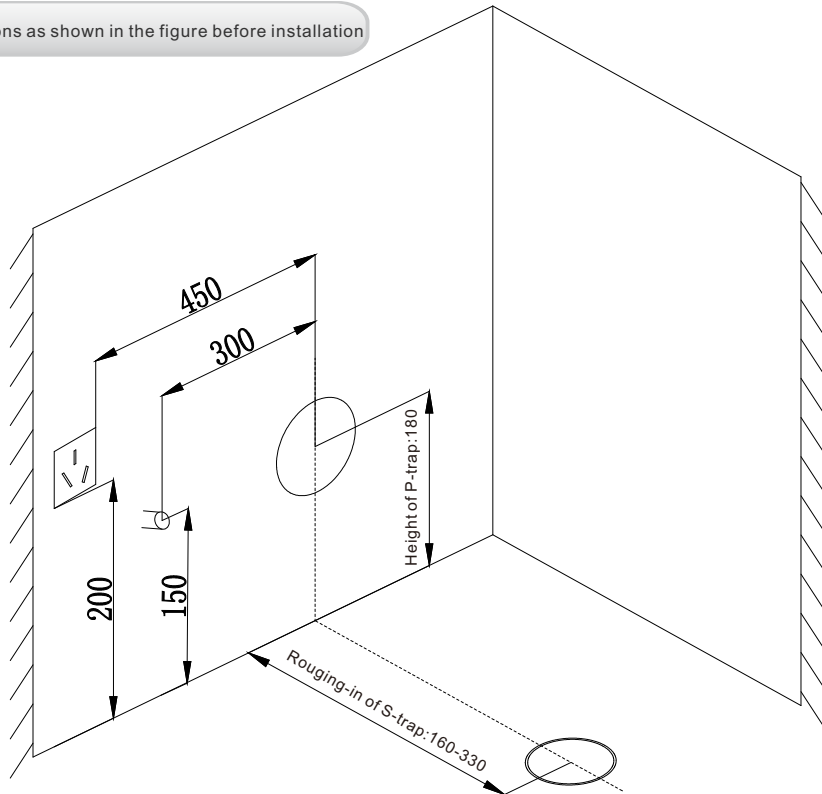

## Install angle valve and constant pressure valve


1. Close the main water supply valve;
2. Remove blockage at the toilet water valve;
3. Wrap the teflon tape on the thread of the to the valve inlet;
4. Install the toilet water valve at the water supply outlet on the wall, and adjust the direction of the valve's water outlet;
5. Put the sealing gasket in the nut of the valve outlet;
6. Install the constant pressure valve on the water outlet of the valve, and adjust the direction of the water outlet of the constant pressure valve.

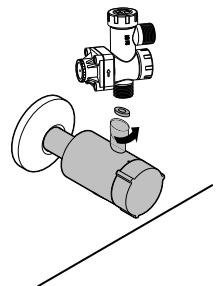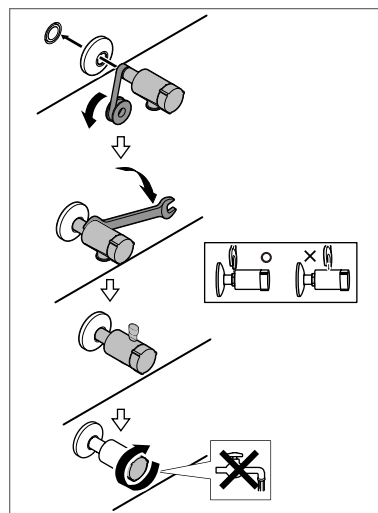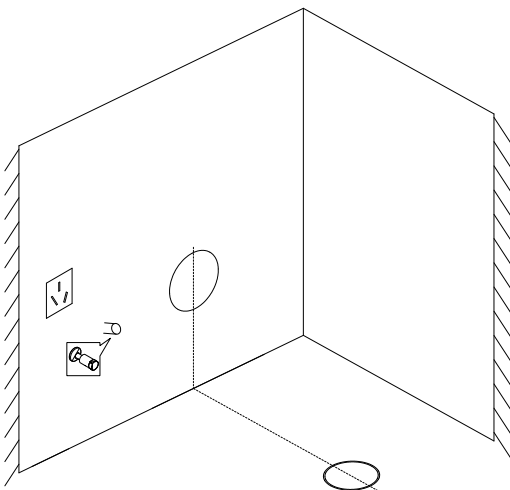


# Installation Instruction

## Installation of anchor screw assembly


1. Draw the mark according to the size shown in the figure.

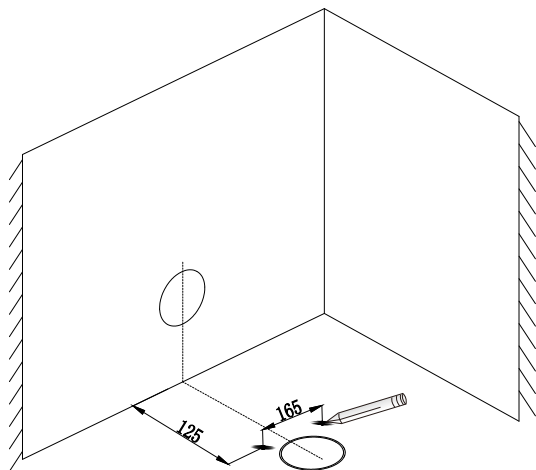


2. Use an 8mm drill bit to make a hole at the mark with a depth of 50mm.

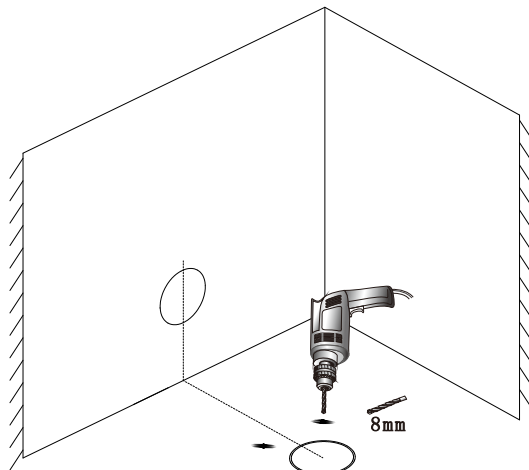


3. Knock the plastic expansion into the opened hole.

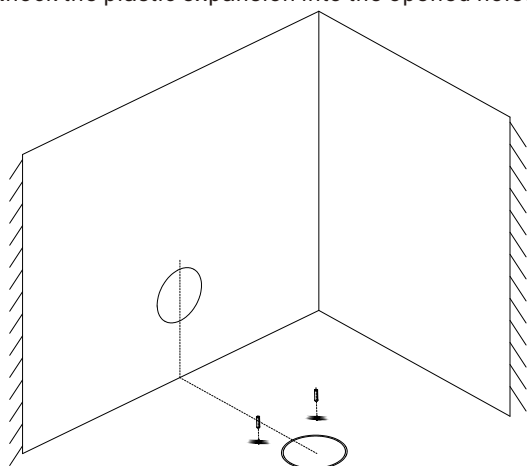

4. Fix the fixed shell with screws as shown in the figure.

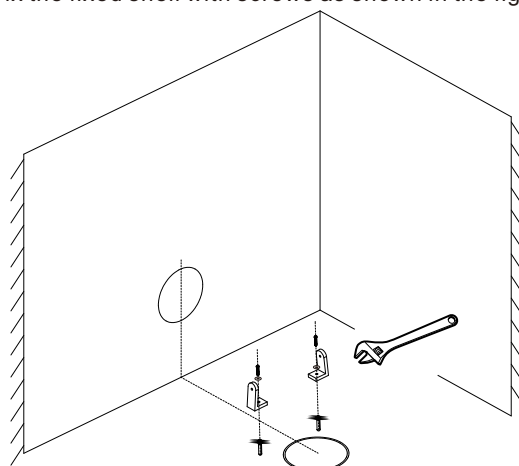

5. The anchor screw fixing block is installed and the dimensions are as shown in the figure below.

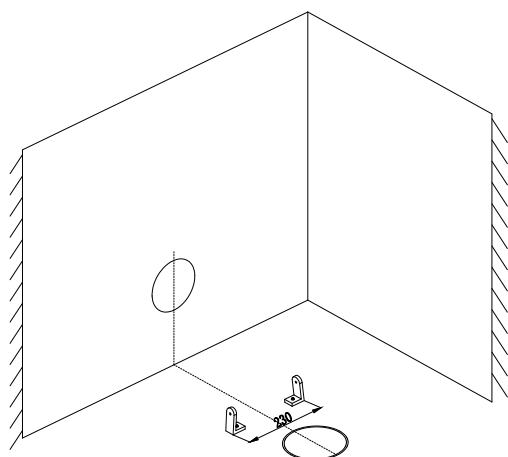


# Installation Instruction


## Toilet Installation

### Method 1: P-trap

1. As shown in the figure, set the sewage pipe to the sewage outlet of the toilet.

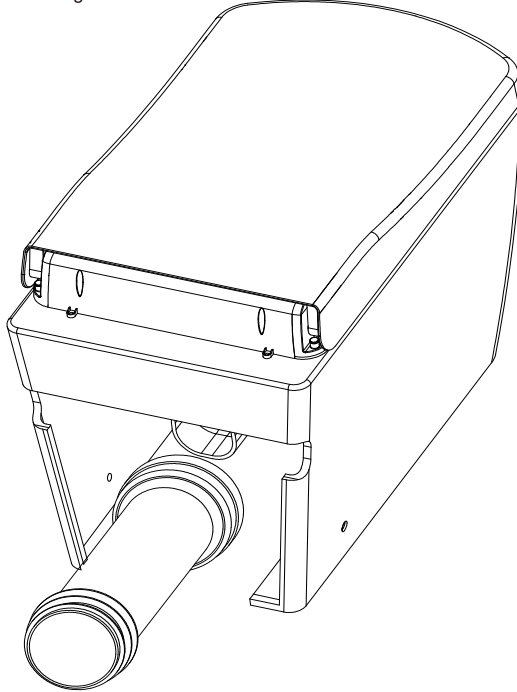


2. As shown in the figure, align the center of the sewage pipe with the sewage outlet on the wall, and then push the toilet back until it is flat against the wall. After the toilet and the sewage pipe are connected in place, tighten the anchor screws and change the decorative cap.

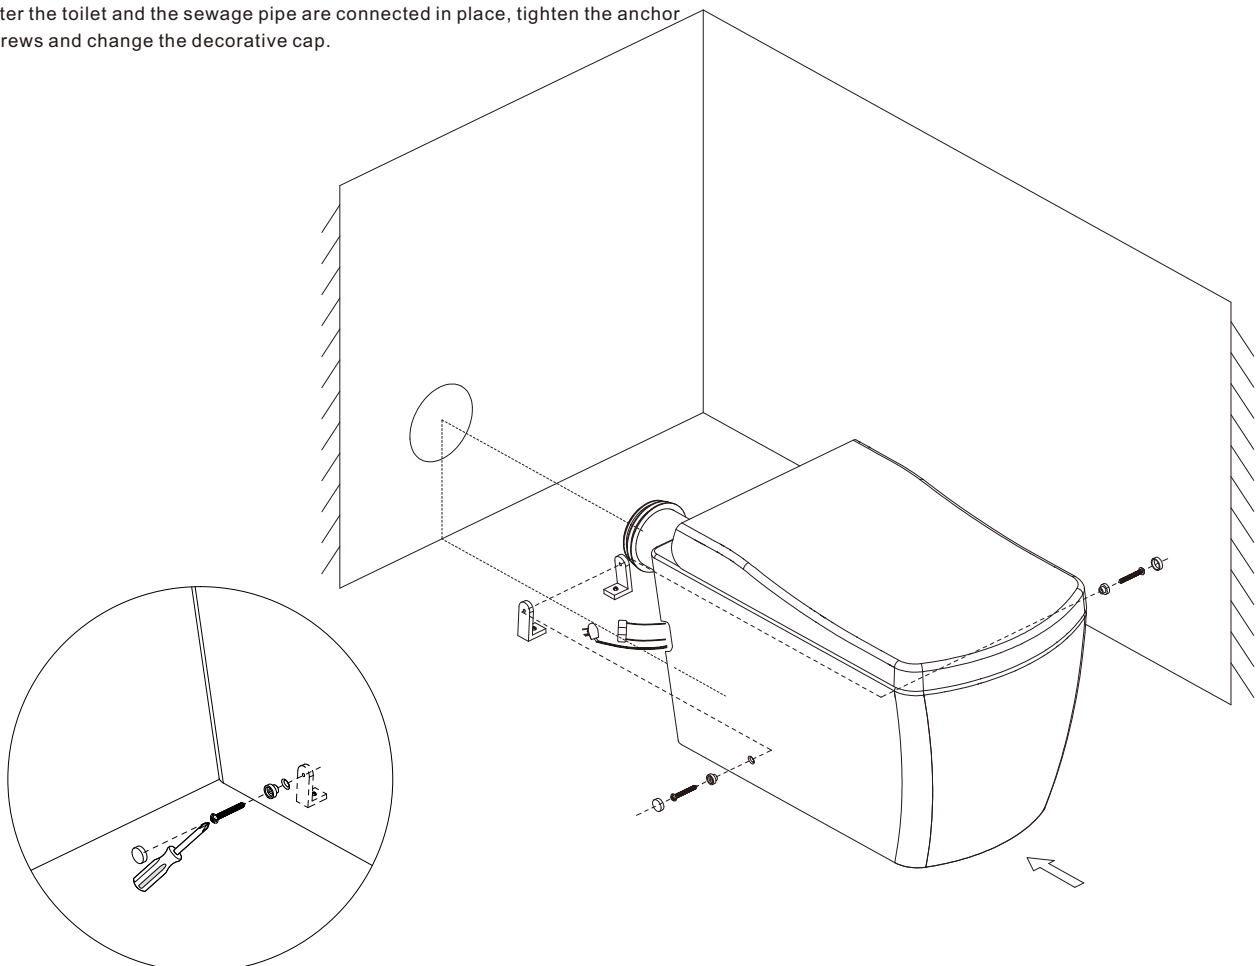


## Installation Instruction

### Method 1: P-trap

3. As shown in the figure, connect the water inlet braided pipe to the water outlet of the constant pressure valve, and the nut must be tightened.

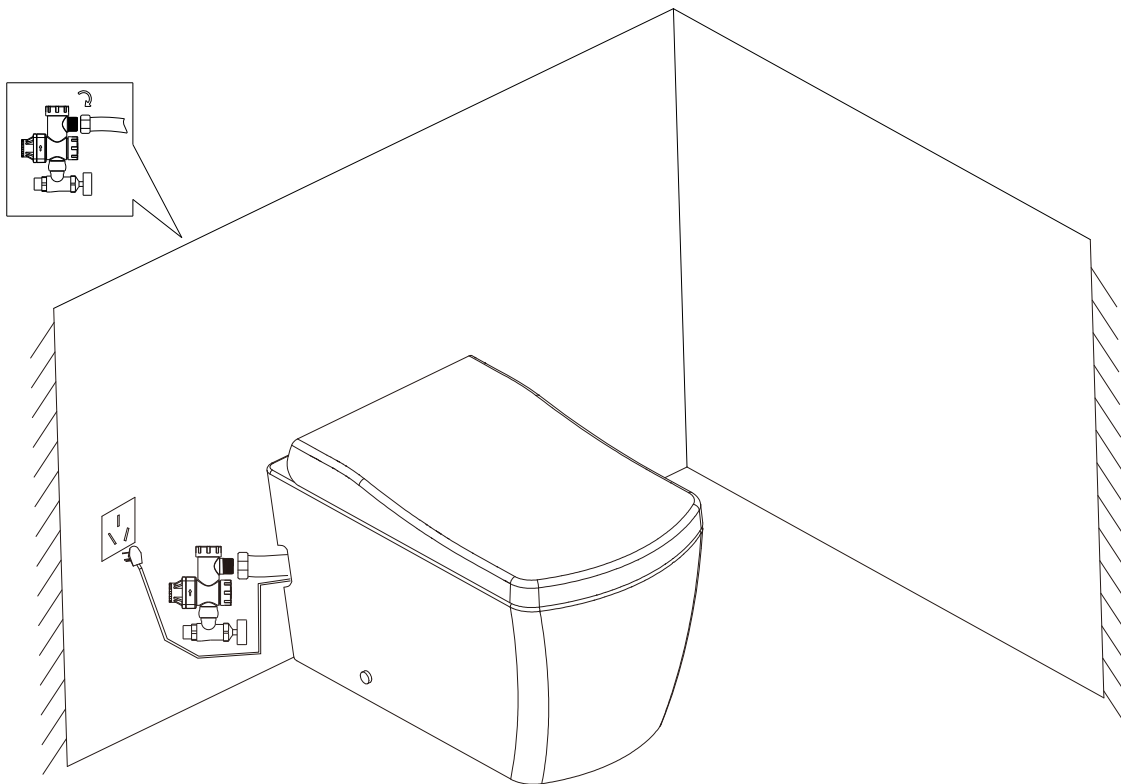

4. Insert the power plug of the toilet into the socket.

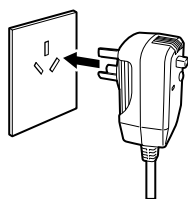


5. Finally open the angle valve, test the operation with electricity, fix the toilet with glass glue, and cover the decorative cover to clean up the garbage.

# Installation Instruction


## Method 2: S-trap

### ● Install the sewage pipe


1. As shown in the figure, measure the(L)length of the S-trap roughing-in.

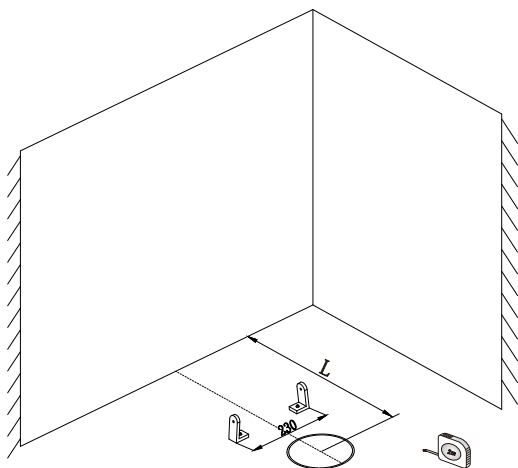


2. As shown in the figure, cut the excess length ( $330-L$ ) of the sewage pipe.

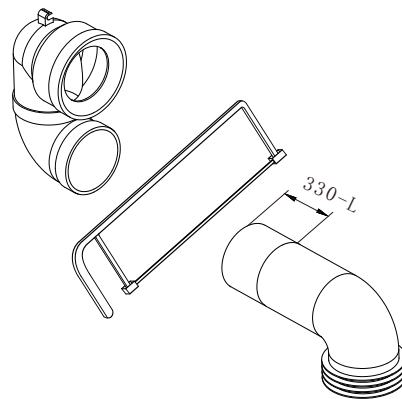


3. As shown in the figure, use a file to polish the cut drain pipe to remove burrs.

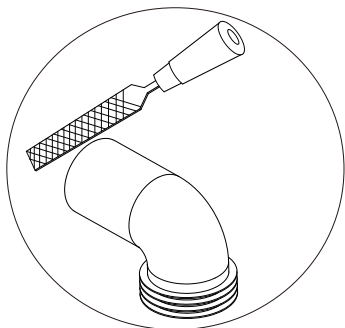


4. After polishing, apply silicone oil or special glue to the nozzle, and then connect the sewage pipe.

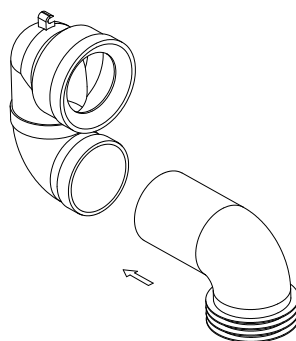

5. As shown in the figure, draw a mark with a marker.

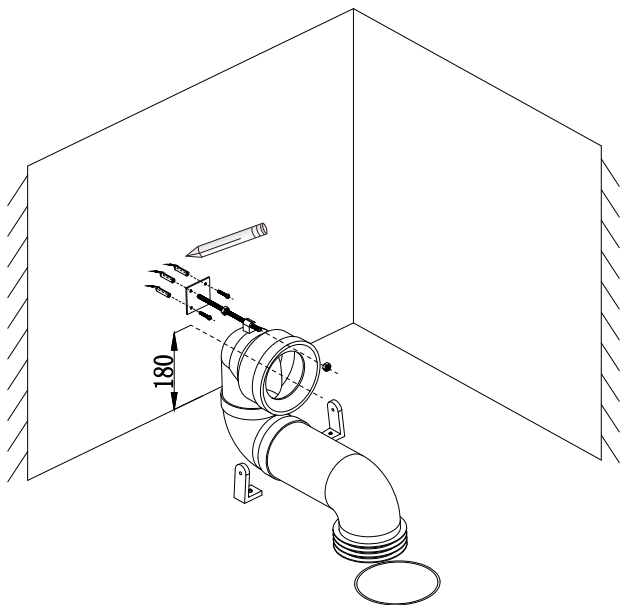

6. As shown in the figure, first make a hole at the marked place, and then knock in the plastic to expand.

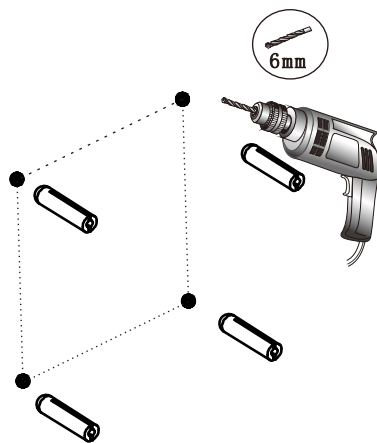


# Installation Instruction


## Method 2: S-trap

### ● Installation of blowdown pipe

7. As shown in the figure, insert the sewage pipe into the drain outlet on the ground, adjust the size, and then fix it.

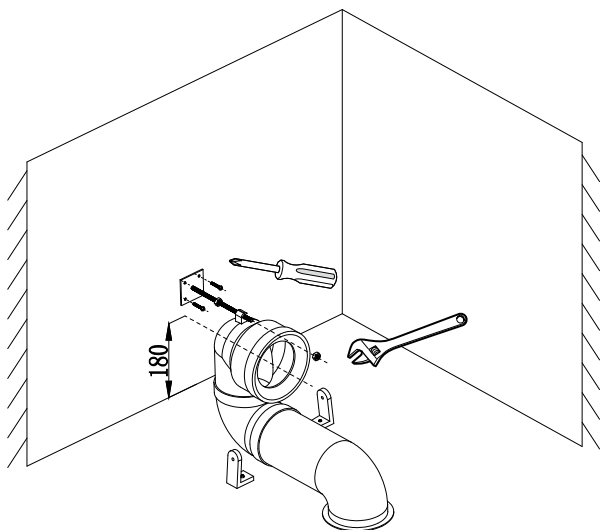


8. The sewage pipe is installed, as shown in the figure.

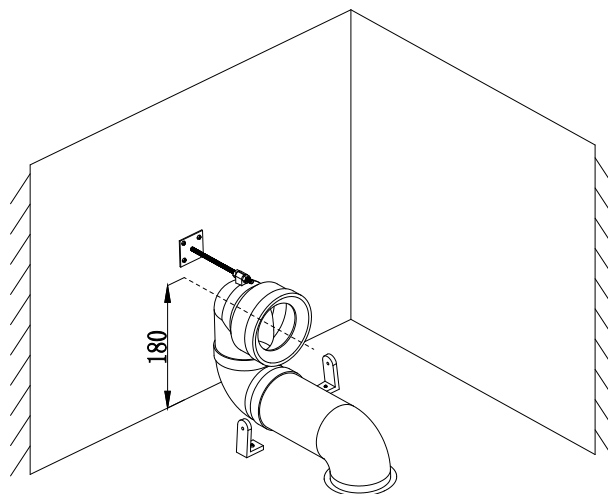

### ● Install toilet


1. As shown in the figure, align the toilet drain outlet with the center of the sewage pipe, and then push the toilet back until it is flat against the wall. After the toilet and the sewage pipe are connected in place, tighten the anchor screws and change the decorative cap.

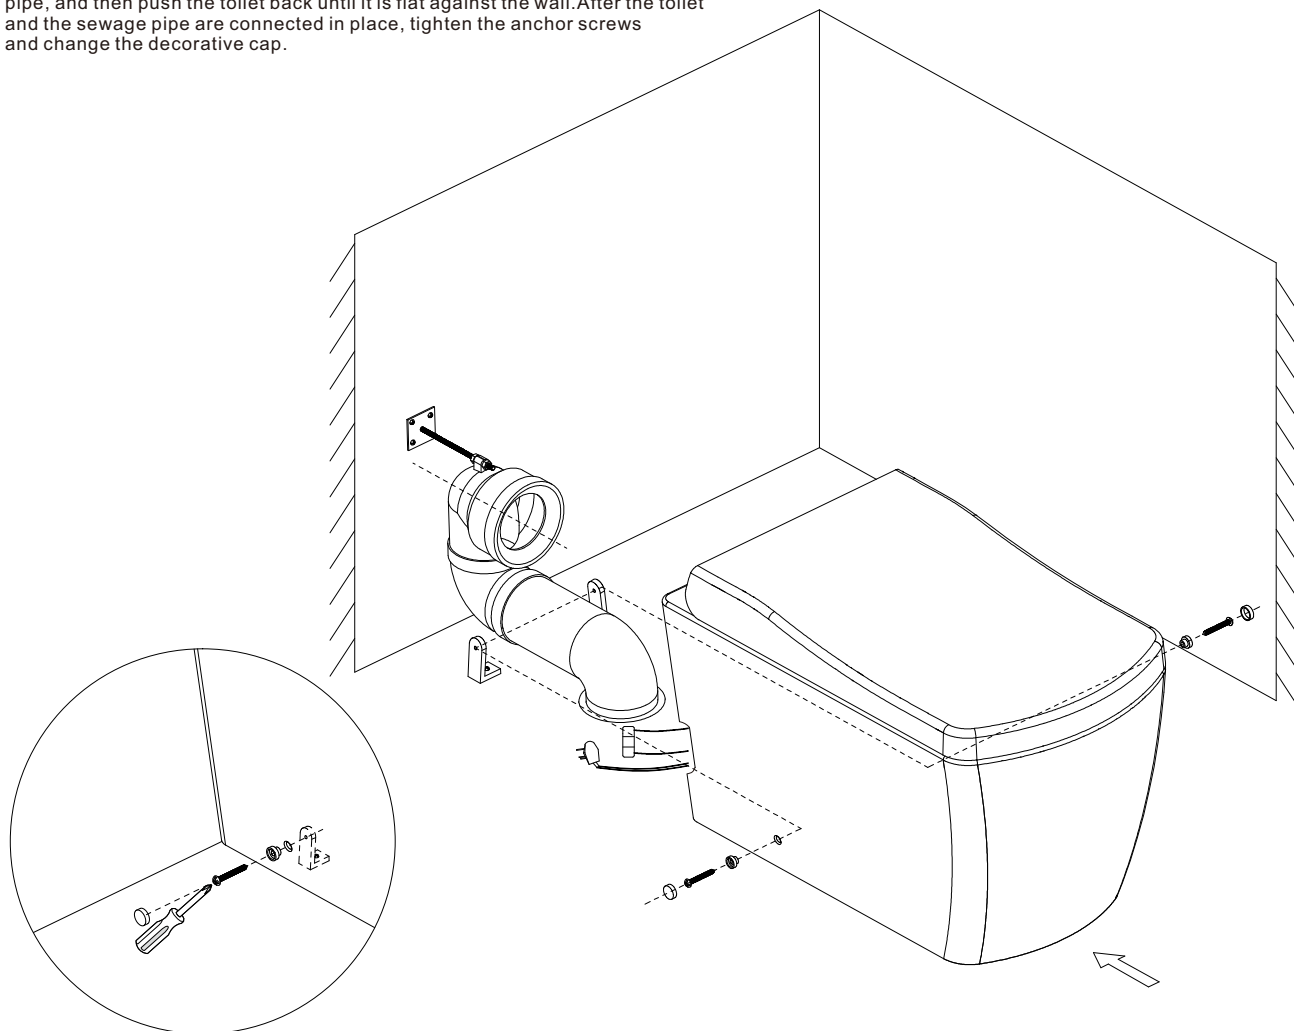


# Installation Instruction

## Method 2: S-trap

2. As shown in the figure, connect the water inlet braided pipe to the water outlet of the constant pressure valve, and the nut must be tightened.

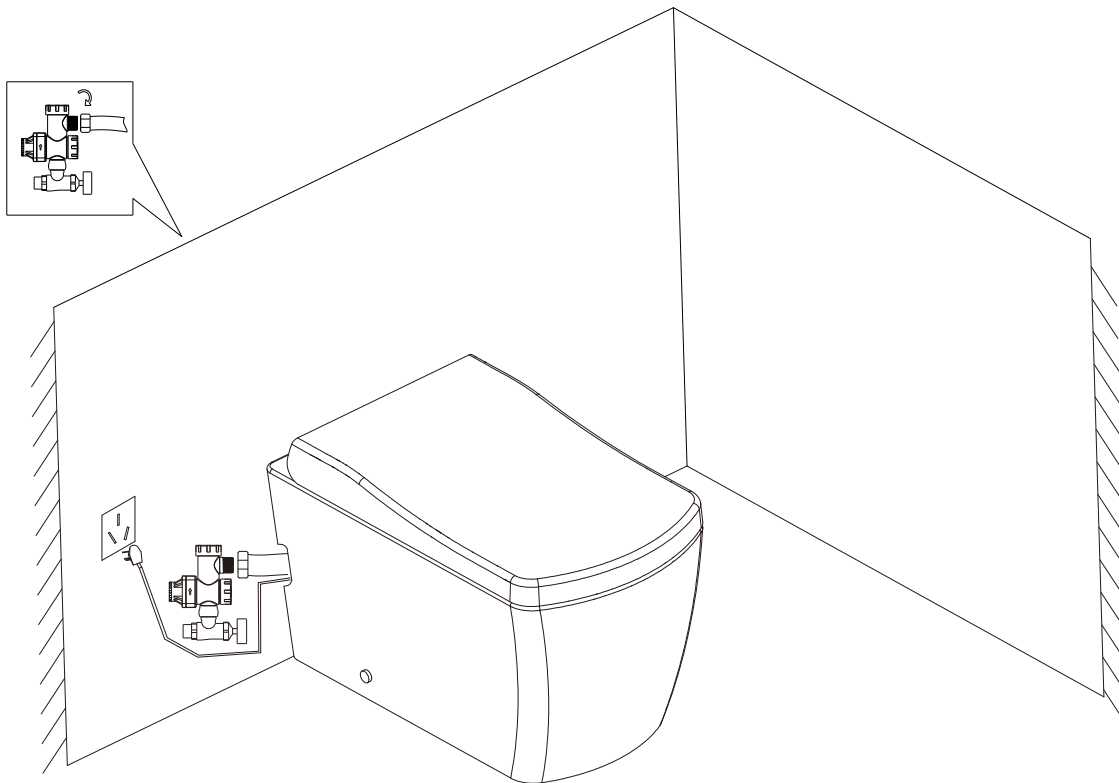

3. Insert the power plug of the toilet into the socket.

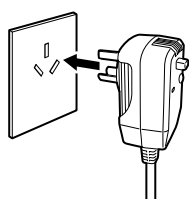


4. Finally open the angle valve, test the operation with electricity, fix the toilet with glass glue, and cover the decorative cover to clean up the garbage.




## Installation Instruction

### Install Remote Control

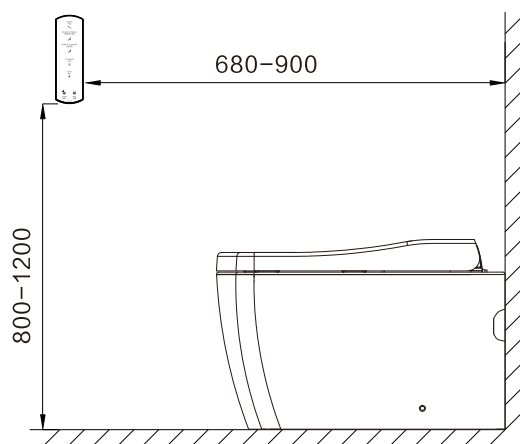

### • Install Remote Control

1. Take the remote control out of the bracket, and then put in the battery
2. Confirm the installation location of the remote control
3. Tear off the 3M glue on the back of the bracket, and then paste the bracket on the wall
4. Put the remote control on the bracket, the magnet will automatically attract

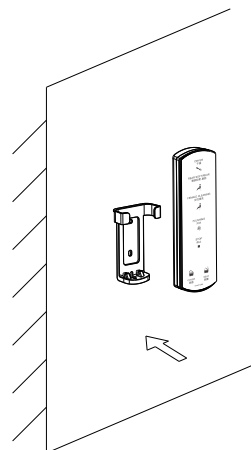

Note: Appearance and function are subject to the actual product.

## Function Description


### I CLEANING

1. **Rear soft** Soft but satisfying water stream with specially designed built-in aerated pump, cleaning hip deep dirt.
2. **Female Cleaning** Soft aerated mist water stream for feminine cleaning.
3. **Reciprocating cleaning** Clean Nozzle automatically moves back and forth with soft water stream for wide cleaning.
4. **Nozzle position adjusting** Cleaning the best place with adjusting nozzle back and forth.
5. **Massage** Water pressure changes from strong to weak circularly to help avoiding any constipation.
6. **Water pressure adjusting** Five levels pressure to adjust to make sure the cleaning force suitable for you.

### II HUMANISTIC SERVICE FUNCTION

1. **Without tank** Connect the water supply tube directly. Avoid germ and smell in the tank. Supply warm water continually with instant heating system.
2. **Auto flush** When leave seat, toilet start autoflush.
3. **Auto opening cover and seat** Auto opening the cover with human sensor, and open the seat with remote control, safe and convenient.
4. **Drying** After cleaning the drying function free yourself from toilet roll.
5. **Temperature adjusting** 5 levels temperature can adjust for seat, wind and cleaning water.
6. **Auto deodorization** Active carbonated deodorizer eliminates embarrassing odor.
7. **Wireless remote control** Remote control with RF technology.
8. **Self-cleaning nozzle** The nozzle will clean itself before Rear soft or Female cleaning.
9. **Warm seat** Warm seat makes you comfortable in winter.
10. **Night light function** When the cover open, the night light will turn on, it will turn off after you leave for 5 min.

## Function Details

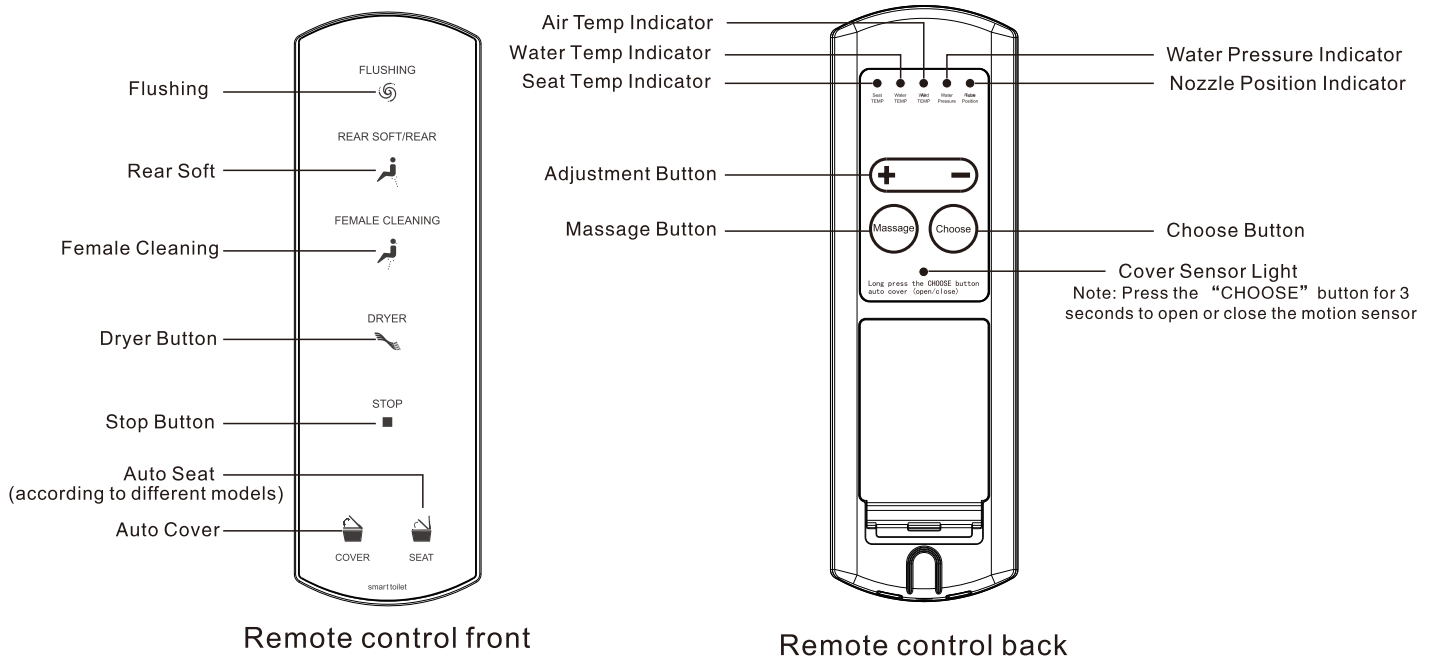

### I Flushing

- 1.1. Press the flush button on the remote control, and the toilet will start flushing;
- 1.2. After the rear soft or female cleaning, press the dry button, it will be automatically flush;
- 1.3. After the human body sits and leaves for 3 seconds, it automatically flushes;
- 1.4. When the power goes out, failure press the flush button on the side button of the toilet, it will flush. (Note: The amount of flushing water can be adjusted in two levels. Operation method: Press and hold the flush button on the side button for about 2-3 seconds. When you hear a "ding" sound, it is first gear, and repeating it is second gear. The second gear is mainly for customers' homes with low water pressure and poor cleaning.. )

### II Rear Soft

When the seat sense, press Rear soft once to start work; press twice to start reciprocating, Nozzle automatically moves back and forth with soft water, press again to stop.

### III Female Cleaning

When the seat sense, press Female cleaning once to start work; press twice to start reciprocating, Nozzle automatically moves back and forth with soft water, press again to stop.

### IV Reciprocating cleaning

When the seat is sensing, press the remote control to select the rear soft or female cleaning repress the rear soft or female washing, the reciprocating cleaning work starts, and the button is repeated again, the reciprocating washing stops and returns to the cleaning state. Reciprocating cleaning: The cleaning tube expands and contracts forwards and backwards, and the cleaning area is wide and cleaner.

## Function Details

---

### IV Dry

Press DRYING to start working. Warm wind will dry your skin.

---

### V Auto Cover

When you get in the range of cover sensor, the cover will open automatically. After you leaving for 5 min the cover will close (Cover sensor only works as you moves, if you stay still, it can't sense you.) You can open or close the cover with button COVER also.

---

### VI Remote Control Seat

You can open or close the seat with button SEAT (according to different models).

---

### VII Massage

When Rear soft or Female cleaning is working, press Massage to start work, the water pressure begins to change from strong to weak circularly, press again to stop.

---

### VIII Adjustment

Press CHOOSE button, the indicator light will lighten, choose the function you want to adjust, then press 'Adjust +, -' to change the levels. There are five levels to choose. The red light represents the highest level and green means the lowest. You can press button continually and the light will lighten in turns.

---

### X Automatic Deodorization

Built-in automatic deodorant.

---

### XI Night Lights

When the human body is close to the motion sensor, the seat cover automatically flips up and the night light function is turned on; after five minutes, there is no induction, the night light is automatically turned off, press the remote control to close the lid, and the night light function is automatically turned off.

---

### XII Motion Sensor

Motion sensing is turned on. The seat cover will automatically open when the human body moves within 1 meter of the toilet. The seat cover will automatically close when a person leaves for 5 minutes. If the human body moves within 5 minutes, the closing time will be extended. After the lid is closed, it will take 10 seconds for the motion sensing function to sense next time. Long press the selection button for 3-5 seconds, the motion sensor status indicator will turn green, indicating that the motion sensor is on; long press the selection button for 3-5 seconds, the motion sensor status indicator will turn red, indicating that the motion sensor is in Shielded status. To check whether the motion sensor is on or in the shielded state, press any key on the remote control. If the motion sensor status indicator is green, it is in the on state, and if it is red, it is in the shielded state.

---

### XIII App Control

- 13.1 Choose the corresponding download channel according to different mobile phone systems. For Android system, please choose Play Store to download. For Apple system, please choose APP Store to download.
  - 13.2. Search for "smart toilet", download and install according to the prompts.
  - 13.3. Open the APP after installation and connect Bluetooth.
  - 13.4. After completing the above steps, you can use it normally.
- (According to different models)
- 

### XIII Foot Sense

When the feet are close to the sensing range, the functions of automatic cover flip, seat flip, and flushing can be realized respectively. (According to different models)

---

## Confirmation Before Using

### I Install battery

Put two batteries into remote control properly.

Note: To avoid battery broken , leakage, please make sure comply following tips.

- Please replace the same specification battery.
- Please take out battery when not use for long time.
- Please note the polar when replace battery.
- All setting infomation(temperature, level etc)will cleared and resort to factory setting after replace battery.

### II Connect power

Connect the power plug to power outlet, the product will set up automatically, finish set-up in 10 seconds.

### III Connect water

Open inlet valve, make sure water run well.

### IV Check indicator light

Check indicator light if it is lighten. If not, check the power .


## Maintenance Instruction

Please clean and mantain product as follows

- Clean with soft wet cloth.
- If necessary, clean with netural detergent, then with water.
- After clean ceramic, please dry the detergent residue on the plastic with soft cloth.
- To aviod water, please dry with soft cloth after cleaning because it is electric product.

Clean filter net (one time every month)

- 1.Close water inlet valve.
- 2.Remove off the filter net.
- 3.Clean  
Clean up the sewage on the filter with water;  
Clean up sewage piece with brush.
4. Install filter  
Install back the filter, and make sure tighten well. If not, may cause leakage.

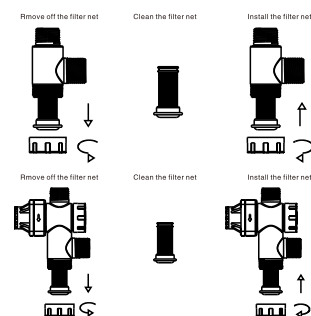

# Troubleshooting

⚠ Note: Do not disassemble and repair by yourself, please get help from professional person(May cause fire or electric shock). Please refer to the troubleshooting guide if it doesn't work. If can't solve please contact in time with your dealer or wholesale distributor.

Product part or function	Symptoms	Probable Cause	Recorrective action
Main part	Does not work	The power is not switched on	Open power
		The power cord is disconnected or the plug has no power	Insert the power cord into an electrical outlet or check the power plug
		A power failure occurred	Wait until the power is restored
Rear soft, Female cleaning	The nozzle has no water out	The water supply valve is closed	Turn on water valve
		Water failure occurred	Wait until water is restored
		The nozzle plugged	Clean the nozzle according to the installation guide
		Seat doesn't detect user	Adjust the sitting position
	The water pressure is low	Low supply pressure	Increase the pressure
		The water supply is clogged	Clean the filter
Product part or function	Symptoms	Probable Cause	Recorrective action
Rear soft, Female cleaning	Water stops flowing from the spray wand before I am finished cleansing	One minute after pressing one of the spray icons, washing automatically stops.	Press the "Rear soft" or "Female cleaning" again
		The seat sensor is not detecting the user	Adjust the sitting position
	The water temperature is low	"unheat" water temperature	Increase the water temperature
Air Dryer	The wind temperature is low	"unheat" wind temperature	Increase the wind temperature
	The hot blower stop during use	One minute after pressing "drying" icon, blower automatically stops.	Press the "drying" icon again
		The seat sensor is not detecting the user	Adjust the sitting position
Seat Heated	The seat temperature is low	"unheat" seat temperature	Increase the seat temperature
		energy saving	Rest seat temperature
Buzzer abnormal alarm	Indicator light of water temperature flash	Cut off the power, and switch on again. If still have problems, cut off power and contact your dealer maintenance agency.	
	Indicator light of seat temperature flash		
	All indicator light flash	Cut off the power, check if the water supply is stopped. Wait until water is resorted. Turn on power.	
	Leakage	Close valve, stop water supply. Check if the water supply pipe is broken, contact your dealer or maintenance agency.	

## Check And Accept

After installation, must test before the first use. And make record.

Checking					Results
The power outlet is must be 220V ~240V					
Connect power well, not loosen					
Water supply is opened					
Each connections is tightened, reliable (such as valve, filter)					
Power indicator light lit					
Nozzle is no leakage					
All function can work normally. Check and make sure all functions, Rear soft, Female cleaning (massage, oscillating, water pressure, move), air dryer temperature, water temperature, seat temperature, flush automatically, remote control, screen, and indicator lights works well.					
Installation Date		Installation Shop		Installation Worker	

## Specification

Item		Description
Electrical power		220V ~ 240V / 110V
Rated Frequency		50Hz–60Hz
Power cord length		1.5M
Rated power		1120/950 W (when income water temperature at 15℃, cleaning water temperature the highest, cleaning flow the largest, seat temperature the highest)
Water supply pressure		0.15MPa–0.75MPa (0.15-0.75MPa (dynamic 1.5-static 7.5 kg) If the roughing-in is 300mm, the minimum flow rate is 20L/min; if the roughing-in is 150mm or wall row, the minimum flow rate is 30L/min.)
Cleaning unit	Water for rear soft	Water pressure is 0.2MPa (flow) about 0.5-0.9L/min (5 levels)
	Water for female cleaning	
	Water pressure	5 level adjusted (rear soft and female cleaning) computer controlled
	Water temperature	5 level adjusted
	Heating power	1600W
	Safety protection devices	Temperature sensor, temperature fuse wire, water temperature sensor, flow controller
Seat	Seat heating power	45W
	Soft close	Slow down when open and close
	Seat temperature	5 level adjusted
	Safety protection devices	Temperature control switch, temperature fusing silk
Dry	Wind heating power	270W
	wind temperature	5 level adjusted
	Safety protection devices	Temperature control switch, temperature fusing silk
Flush way		Siphon jet flush
Operation environment		0–50℃

## Product Model

Product Model	SL Series	S Series
Cover sensing	√	√
Rear soft	√	√
Female Cleaning	√	√
Stretch– drying	√	√
Internal drying	○	○
Warm seat	√	√
Warm water washing	√	√
Reciprocating cleaning	√	√
Nozzle position adjusting	√	√
Massage	√	√
Cleaning pressure adjusting	√	√
Water Temp adjusting	√	√
Air Temp adjusting	√	√
Seat Temp adjusting	√	√
Self–cleaning nozzle	√	√
Automatic deodorization	√	√
Manual flushing	√	√
Automatic flushing	√	√
Soft close	√	√
Remote control cover	√	√
Remote control seat	○	√
Night lamp	√	√
App Function	√	√

Note: “√” have this function , “○” without this function, “△” optional function.