

# **JIAFU YSH-B18T1 Electric Kettle**

## **Instruction Manual – 1.5L**



Please read this manual thoroughly before operating this unit.

This unit must only be serviced by the authorized seller.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following.

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to Narita USA for examination repair or adjustment. See Warranty.
7. The use of accessories or attachments not recommended by Narita USA may cause hazards.
8. Do not use outdoors
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
13. CAUTION: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other damages to persons or property.
14. This appliance generates steam. Do not operate uncovered.
15. Do not leave unit unattended while in use.
16. This appliance is for Household Use Only. Do not use appliance for other than intended use.
17. Do not place the kettle on other heat sources (e.g. cooking stove). It may become deformed.
18. Do not block steam vent holes.
19. During or immediately after cooking, the area near the Steam Vent Hole is kept at high temperature. To avoid burns, do not touch this area.
20. To reduce the risk of electric shock, cook only in the removable container.

# BEFORE FIRST USE

Before using for the first time, it is recommended to clean the interior of the kettle thoroughly. Please follow the procedures below before using the kettle:

1. Read all instructions and important safeguards.
2. Remove all packing materials and make sure that the product has been received in good condition.
3. Take care to keep the electrical components on the exterior of the kettle dry, wipe out the interior of the kettle with a damp cloth. If your hand will not fit inside the kettle, swish warm, soapy water around in the interior of the kettle with the lid closed.
4. Rinse out the inside of the kettle thoroughly with water.
5. With a damp cloth, gently wipe off the exterior of the kettle. Do not wipe off electrical components as this may cause damage to the unit.
6. Dry all parts completely.
7. It is recommended to run your kettle through one boiling cycle before using it to consume beverages. Following the instructions in Boiling Water on page 8, boil one kettle of water. When water has boiled, pour it out and rinse the inside of the kettle once more. The kettle is now ready for use.

# HOW TO CLEAN

1. Wipe the exterior of the kettle with a damp cloth, taking care to avoid the electrical components.
2. Clean the interior of the kettle with a soft sponge and warm, soapy water. If your hand does not fit in the lid opening, swish warm, soapy water around inside the kettle with the lid closed.
3. Rinse any remaining soapy water from the kettle.
4. Drain.


## BRIEF INTRODUCTIONS:

Thank you for purchasing the Multi-Function Electric Kettle. Please follow these simple tips to get the maximum performance and satisfaction from this appliance. Use according to our instructions and it will give you years of trouble-free enjoyment.

# SPECIFICATION

Product name	Jiafu Multifunctional electric heating pot (healthy pot)
Product model	YSH-B18T1
Rated voltage	220V
Rated frequency	50Hz
Capacity	1.5L
Rated power	600W
Dimensions (length x width x height)	268 * 188 * 246mm

# PARTS IDENTIFICATION

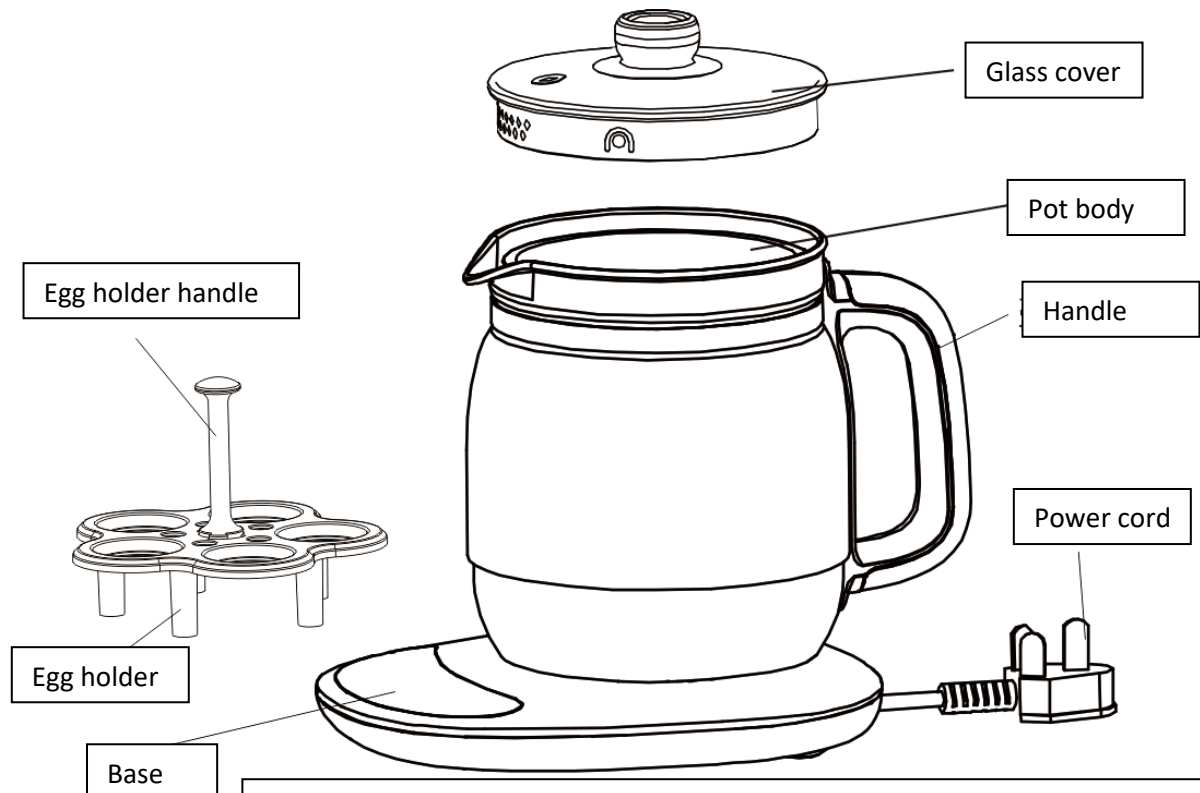

Note: The above pictures are for reference only, subject to the actual product!

# CONTROL PANEL




## FUNCTIONS

### (1) Stew

Including flower tea, fruit tea, desserts, medicated meals, soup, white porridge, coarse grain porridge, steamed eggs, noodles, hot pot, cooking

Hot milk, soaking milk, disinfection, heat preservation and other functions.

1 put all kinds of food materials to be stewed into the glass pot body and add an appropriate amount of water (the water does not exceed the maximum water level). You can put soup, tea, medicinal materials and other food materials into the pot body, cover the glass upper cover, and then put them on the base.

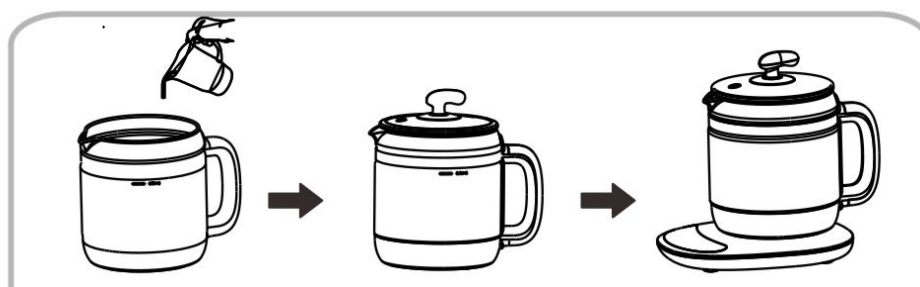

Put in the food to be stewed, and put the soup, tea and medicinal materials on the base of the glass pot.





Add proper amount of water (no more than ingredients) into the pot body, cover it, and set the required functions

The maximum water level) is stewed on the glass cover.


## Warm reminder:

When some foamy soups or desserts, after the water boils, you can lift the glass cover or turn down the power to prevent overflow


## (2) Function selection

	<p>1. Plug in, display the initial standby status, and display the time.</p>
	<p>2. Press the function/cancell button to select "cook soup" and then "cook soup" instructions.</p>
	<p>3. Press the "time" key to adjust the time, such as adjusting to</p> <p>After 1 hour, wait for 5 seconds and then automatically enter the working state:</p>
	<p>4. The product enters the working state. After heating, it reaches the boiling water.</p> <p>Countdown to product entry time.</p>

## (3) Status after work completion

	<p>When the "soup" work is completed, the product will be sent out; Didi...</p> <p>Sound, automatically enter the insulation state, and the time display at this time</p> <p>It's "8:00" hours. After the thermal countdown is 8 hours, return to</p> <p>Initial standby state.</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

#### (4) Water boiled dry state.

	<p>When the water boils up, the product will make a dripping sound, and the time will show.</p> <p>Show: E00, after adding water to cool, it will return to the initial standby state.</p> <p>THE TIME DISPLAY IS: 0:00.</p>
-----------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

#### (5) Adjust the power.

The default power is 600W, display: 600, press the "power" key to adjust the power level, and press the "power" key for the first time to display

Show the current power, and then add 100 to the first power, indicating an increase of 100W. When it is increased to 600, then press the rule to return to

100, hold and hold, select continuously cycles, and then return to the display when the power is selected.




During the operation or insulation of the "soup" function, press the "power" button and press the display for the first time: 600, indicating 600W work.

Rate, click to display 100 again to indicate 100 power.

#### (6) Circuit memory function

After the pot body leaves during work, the circuit has a memory function. Put the pot body back within 10 minutes and you can press it.

The previously set state continues to work.

	<p>After the pot body leaves during the work, it shows as: "000"</p> <p>Put the pot body back to restore the previous function and display.</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------

## Warm reminder:

1. The function of soaking milk is to keep warm at 50 °C after the water boils;
2. Steamed eggs, boiled noodles and disinfection functions do not enter the insulation state, and directly return to the initial standby state;
3. If the insulation time exceeds the time required by the product manual, the food will have an odor.





# Appointment

## Take an appointment for soup as an example:

Make an appointment for 11:00 a.m. at 8:00 a.m. to cook soup. When the food is placed, press the "Reservation" button.

Then press the "Reservation" button to adjust the time to 3 hours, then press "Function/Cancel" to choose to cook soup, and then press the "Time" button.

The adjustment time is 1 hour. After the setting is completed, wait 5 seconds and then automatically enter the working state until 12:00 work ends.

	<p><b>1. Turn on the power supply and display the initial standby status.</b></p> <p>The time shows 0:00.</p>
	<p><b>2. Press the "Reserve" button, and then the "Reserve" light</b></p> <p>Shining, the default time is 0:30.</p>
	<p><b>3. Press the "Reserve" button to adjust the reservation time to 3:00, press the time to add 30 minutes.</b></p> <p>Press and hold without continuous increment, maximum reservation time</p> <p>The interval is 10 hours.</p>
	<p><b>4. Then press the function/cancell button and select "Soup" here.</b></p> <p>When the "cook soup" indicator light shines, the default time 40 minntes.</p>



# Functional timetable

Serial number	Function	Default time	Maximum setting time	Minimum setting time	Temperature
1	Boil water	---	---	---	60 °C
2	Scented tea	0:10	0:20	0:05	60 °C
3	Fruit tea	0:10	0:20	0:05	60 °C
4	Dessert	0:40	1:30	0:05	70 °C
5	Herbal	0:40	2:00	0:05	70 °C
6	Soup	0:40	2:00	0:05	70 °C
7	Rice Congee	1:00	2:00	0:05	70 °C
8	Grain porridge	1:30	2:00	0:05	70 °C
9	Steamed eggs	0:10	0:20	0:08	/
10	Noodles	0:10	0:20	0:05	/
11	Hotpot	0:40	1:30	0:05	60 °C
12	Steam/Stew	0:20	1:00	0:05	70 °C
13	Heat milk	---	---	---	50 °C
14	Milk formula	0:02	0:05	0:01	50 °C
15	Disinfect	0:10	0:20	0:05	/
16	Keep warm	8:00	8:00	1:00	60 °C

# Maintenance

## 01 • Clean Water Scale

Clean scale Scale is a natural deposit formed when water is heated. It often adheres to the inner wall of the pot and the heating plate, which will affect the service life of the pot body and the quality of the water, so it should be removed regularly;

In normal use, generally descaling twice a year (depending on the different water quality in different places); mix vinegar and water according to the ratio of 1:2 into the pot body to the "maximum" position, then heat and boil; let the mixture store in the pot body for 24 hours Pour out the mixed liquid, and then fill it with clean water to the "maximum" position, so that the pot body is reheated and boiled again; after the boiling water is poured out, the scale removal work is completed, and finally the inside of the pot body is cleaned with clean water.

## 02 • Remove food residues.

Clean up the residue after each use, and add a small amount of water and detergent to the pot body. Scrub the inner surface of the pot with a soft cloth or sponge, scrub it clean, pour out the water inside the pot body, and then clean it with water.

Wash the inside of the pot until the water is clean, pour out the water inside the pot body, wipe it clean with a clean cloth, and do not use water directly. Clean the outer surface of the product.

## 03 • Appearance cleaning

1. The exterior of the kettle is dirty and can be wiped with a wet towel and an appropriate amount of detergent.
2. When wiping, never plug it in or place it on the base.

### Notes:

1. After use, you must unplug the power plug, and then wait for the body to cool down before starting cleaning;
2. Do not invade the pot body or base into the water, do not use corrosive cleaners, use neutral cleaners;
3. Don't use banana water, gasoline, decontamination powder, hard brush or stainless steel wire ball, etc. to wipe to avoid damaging the surface; Household cleaner
4. When the product is not in use for a long time, please clean and wipe it, put it in the box, and put it in a ventilated and dry place to avoid It is damp and affects the use.

# Q & A

## **1. There is no display on the digital tube, and the product cannot be used normally:**

- a. Is there a power outage?
- b. Is the power plug properly inserted?
- c. Is the power outlet turned off?

## **2. The food is not cooked:**

- a. Is the set time correct?
- b. Is the selected function correct?
- c. Too little water is added in the body, the product enters the dry-burning protection ahead of time, and the stewing time is too short?

Remarks:

After analyzing the above phenomena, the fault still cannot be eliminated, please contact our company's service center or dealer. It is strictly forbidden for non-professionals to disassemble and assemble the machine by themselves.

# WARRANTY

This unit is warranted against defective materials or workmanship for one year from the date of purchase (warranty is only valid with a dated proof of purchase). The warranty is valid for any manufacturing defects only. This warranty covers operational defects incurred in normal use and does not apply in the case of damage, abuse, mishandling, accident, or failure to follow operation instructions. During the one year warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at our decision). Any return of defective merchandise to the manufacturer must be processed accordingly by contacting customer service first to obtain the Return Merchandise Authorization Number and freight prepaid with proof of purchase. (Please pack your product well; we will not be responsible for damages incurred as a result of improper packing.) We will not accept any returns of merchandise without an applicable RMA#. You may pay the shipping charges to ship the repaired or replacement product back to you.